
Contents

1 Introduction	4
1.1 KEY	4
1.2 ICONS & SYMBOLS	6
2 Getting Started	8
2.1 INSERTING THE SIM CARD AND THE BATTERY	8
2.1.1 Remove the back cover	8
2.1.2 Remove the battery	8
2.1.3 Insert the SIM card	8
2.1.4 Install the battery	8
2.1.5 Install the back cover	9
2.2 INSERTING A T-FLASH (EXTERNAL MEMORY) CARD	9
2.3 TURNING THE PHONE ON	9
2.4 CHARGING THE BATTERY	10
2.5 IMPORTANT PASSWORD	10
2.6 KEYPAD LOCK AND UNLOCK	10
2.7 TRANSFER FILES TO THE T-FLASH (EXTERNAL MEMORY) CARD	11

3 Text Entry	12
3.1 INPUT METHOD	12
3.1.1 Changing the input modes	12
3.1.2 Entering Symbols	12
3.2 SMART ENGLISH INPUT	12
3.3 MULTITAP INPUT	14
3.4 NUMERIC INPUT	14
4 Calling	15
4.1 MAKING A CALL	15
4.1.1 Making an International Call	15
4.2 ANSWERING A CALL	15
5 Function Menu	17
5.1 HOW TO USE	17
5.1.1 Select Menu	17
5.2 MAIN MENU	17
6 Safety Information and Notices	25
7 Frequently Asked Questions and Troubleshooting	27

Preface

Thank you for purchasing X414 phone.

To guarantee your cellular phone works properly, please follow the instructions in this manual to prevent any possible incidents or malfunctions.

Follow all safety warnings to avoid injury or property damage.

Screen displays and illustrations in this user's manual are designed to help you operate your phone to its optimum performance.



We continuously strive to improve our products. Therefore, we reserve the rights to revise this user manual or withdraw it at any time without prior notice.

1 Introduction

1.1 Key










Key	Function
Dial Key	Make or answer a call to Sim card 1/2. View Dialed Calls in standby mode.
End Key/ Power Key	Pressing and holding to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode.
Left Soft Key	Menu Key
Right Soft Key	Contacts
OK Key	Add shortcuts In idle mode, press and hold OK key to turn on/off torch light.

	After inputting numbers, press this key to do options.
Numeric key	Enter numbers, letters or characters. Select a submenu item labeled with the corresponding number.
*	Press to toggle between *, +, (pause character) P, and (wait character) W. Press to enter symbol when editing text.
#	Press to switch input modes when entering text. Press and hold to shift user profiles of General/Meeting/Silent when phone is in idle mode.
Navigate Keys	In idle mode, press up key to access Audio player; press down key to access Calendar;press left key to access write sms; press right key to access Profile. The user can define your own shortcuts for navigate keys Within a menu, press Up, Down, Left and Right to scroll through menu options.



Note: “Press” in this manual, means to press and release the key; “press and hold” means to press and hold the key for at least 2 seconds.

1.2 Icons & Symbols

	Battery - Indicates battery level.
	To log on GPRS - The icon will be displayed only when you have logged onto GPRS.
	Message - Indicates you have one or more unread messages.
	Voicemail- Indicates voice messages that have not been heard.
	Missed call - Indicates there is a missed call.
	Call Divert - Indicates that “Divert All Voice Calls” is activated.
	Alarm-Indicates that the alarm clock is on.
	Silent-Indicates that silent profile is activated.
	Headset-Indicates that headset profile is activated.



Flight Mode-Indicates that flight mode is on.

2 Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

2.1 Inserting the SIM Card and the battery

2.1.1 Remove the back cover

Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards; press and push the back cover downwards; lift the back cover up to remove it.

2.1.2 Remove the battery

Put your finger on the top of the battery slot and lift the battery up to remove it.

2.1.3 Insert the SIM card

Make sure that the clipped corner of the SIM card is facing the correct direction (clipped corner at down right) and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops.

2.1.4 Install the battery

With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down into its slot until it locks into place.

2.1.5 Install the back cover

Put the back cover on the battery slot and then push the back cover upwards until it locks into place.

2.2 Inserting a T-Flash (External Memory) Card

1. Lift up the T-Flash card cover on the down side of the SIM card slot. Pull the cover down if it is locked and then lift it.
2. With the metal contacts facing down, gently slide the T-Flash card into the slot.
3. Press and pull the cover up to lock it.

2.3 Turning the phone on

To turn the phone on, press and hold the Power key. If you have already enabled the Sim Lock function then enter the PIN code (the 4 to 8 digit secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your

SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator.

2.4 Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the left side of your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. It takes about 4 hours to fully charge the battery.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.



Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

2.5 Important Password

Phone lock password is 0000.

2.6 Keypad Lock and Unlock

Go to Settings > Security > Auto Keypad Lock to select the time for keypad lock.

In standby interface, if the time expires, the keypad will be locked automatically.


Lock: press left soft key and * key in standby interface.

Unlock: firstly press unlock key (left soft key) and then press * key in standby interface.

2.7 Transfer files to the T-Flash (External Memory) card

Insert your T-Flash card into a card reader, and then connect the card reader to the USB port of a PC. The PC will auto detect the card reader as a removable disk. You can access the T-Flash card memory now. Also you can use your phone as a “mass storage” mode to access the memory card to transfer the files vice-versa.

Download or upload the files to T-Flash card.

When the transfer is finished, please make sure that you safely remove the card reader by clicking .

Finally, insert your T-Flash card into your cellular phone, you can view the files in Menu >File Manager.

3 Text Entry

3.1 Input Method

Your cellular phone supports several input methods, which include:

Multitap ABC/abc

Smart English(sEng)

Numeric(123)

3.1.1 Changing the input modes

During text editing, you can press the # Key to switch input modes .

3.1.2 Entering Symbols

In any input mode, press the * Key to open the symbols input screen. Use numeric key to choose the desired symbol and the Left soft key to select it.

3.2 Smart English Input

Letters and symbols represented by each key are as follows:

2 to 9	Press to input letters
0	Press to input space
Up/Down	Press to browse the last or next available word.
Left Soft Key (Select)	Press to confirm the letter or word
Right Soft Key (Clear)	Press to clear a letter, press and hold to clear all entries
#	Switch between input mode
*	Press to enter symbol screen

Example: How to enter the word "Home"

1. Press the # Key to switch to smart english.
2. Press 4 6 6 3, the first word "Good" appears.
3. Press ► to browse and select "Home".
4. Press the Left Soft Key [OK] to confirm "Home".

3.3 Multitap Input

This method requires multiple key presses to reach the desired character: the letter "h" is the second letter on the 4 key, so you must press 4 twice quickly to enter "h". Using this mode requires you to press a key as many times as needed to enter the desired letter.

Example:

To enter the word «home» in Multi-tap input mode "abc", press key 4(GHI) twice, press key 6(MNO) thrice, press key 6(MNO) once and key 3(DEF) twice.

3.4 Numeric Input

Press the # Key to select "123" input option then you can enter the numbers.

4 Calling

4.1 Making a Call

In idle mode, enter the phone number.

Press the Dial Key or Left Soft Key to call the number

Press the Hang up Key to end the call.

4.1.1 Making an International Call

1. Press the '*' Key twice until "+" appears on the screen.
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Press the Dial Key or Left Soft Key to call the number

4.2 Answering a Call

Press the Dial Key or Left Soft Key to answer calls

Press End Key or Right Soft Key to reject it.

5 Function Menu

5.1 How To Use

5.1.1 Select Menu

Press the left soft key to enter main menu in idle mode.

Press the Navigation Keys to choose desired operation and press the Left Soft Key to enter the selected operation.

You can exit a menu and return to idle mode by pressing the Right Soft Key or the End Key.

5.2 Main Menu

All function options about the mobile phone are listed as below with brief descriptions

Call History
To view the dialed, received, missed, rejected calls, to delete all, and check call time and GPRS counter.

Phonebook	
new	To add a new phonebook entry.
Send	To send SMS or MMS to contact.
Call	To dial the contact directly.
vCard	To send vcard to contact by SMS or by Bluetooth.
Delete	To delete the selected phonebook entry.
Mark	To mark or mark all entries for further operations.
Copy to phone	To copy the phonebook entries from your SIM card to your mobile.
Copy to SIM	To copy the phonebook entries from your mobile to your SIM card
Others	To do other operations such as set Fixed Dial No., Memory details.
<p>This phone supports to classify entries in different groups. The default groups are: phone, groups, SIM1, SIM2 and blacklist</p> <p>-Blacklist: you can add an entry in Blacklist, or check call records to select the number you want to set as rejected number. After adding an entry to this group, next time when the contact calls in, the call</p>	

information will not be shown and the contact will hear the voice message that the number he/she called is busy.

Settings

- General

To perform the setting related to mobile phone such as Personalization, Time and date, profiles, power on/off, information, security and restore settings

- Personalization

To perform the setting related to display, standby mode, ringtone settings and display language.

- Security Setup

To perform the setting related to security Including PIN, PIN2, Auto keypad lock,

- profiles

To perform the setting related to security Including General, Silent, Meeting, outdoor, silent, personal and headset.

- Phone

To perform the setting related to call settings, call divert, call barring, network settings, Switch mode, Default SIM and speed dial

- connection

To perform the setting related to network including Data accounts, wap settings and MMS settings. Choose data settings according to your SIM provider.

Organizer

Calendar	To display date list and arrange your journey to calendar
----------	---

Alarm	To use the alarm service available with your mobile phone
-------	---

Notepad	To write note with your mobile phone
---------	--------------------------------------

Messages

- Create new	
--------------	--

SMS	To create a new SMS.
-----	----------------------

MMS	To create a new MMS.
-----	----------------------

-Inbox	To view the received messages.
--------	--------------------------------

-Draft box	
To save the messages that are not ready to send out in order to further edit, and then send.	
-Outbox	
To view the messages in sending or sent unsuccessfully.	
-Sent box	
To view the sent messages.	
-Templates	
To view or edit the templates to create.	
-Voice Mail	
Automatically to direct incoming calls to the voice mail centre when you cannot accept a call so that the caller can leave a message on the voice mail system of service network. It needs network support from your SIM provider	
- Cell broadcast	
To receive public messages on all different subjects from your network operator. It needs network	

support from your SIM provider.	
- Settings	
To perform the setting related to SMS, MMS, Cell broadcast and voice mail	
-Memory status	
To check the memory status of SMS and MMS.	
Services	
Internet	Your mobile phone supports wireless application protocol (WAP) service. You can access many different WAP services such as news, weather reports, flight information, and others.
Profiles	
To perform the setting related to security Including General, Silent, Meeting, outdoor, silent, personal and headset.	
Multimedia	
-Music	To play the music

-Video Player	To play the recorded movie.	
-Photo viewer	To view the saved image.	
-FM radio	To receive the FM broadcast.	
-Sound recorder	To record the sound.	
File manager		
To manage the space of memory card, perform the corresponding operation on the selected file and folder		
Applications		
E-Book reader	To read the e-book with text format	
You may play the built-in games and alter the game settings.		
Tools		

To perform the features including calculator, converter, stopwatch, timer, world clock, shortcuts, BMI and **Torch light**

6Safety Information and Notices

Before using the phone, please read the safety precautions carefully and let your children know these, so that you can use your phone correctly and safely.

Do not switch on your phone when phone use is prohibited or when phone use may cause interference or danger.
--

Do not use your phone while driving.

Follow the rules or regulations in hospitals and health care facilities. Switch off your phone near medical equipments.

Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft.
--

Switch off your phone near high-precision electronic devices. The phone may affect the
--

performance of these devices.
Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.
Do not place your phone or its accessories in containers with strong electromagnetic field.
Do not place magnetic storage media near your phone. Radiation from the phone may delete the information stored on them.
Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
Use approved batteries and chargers only to avoid explosion.

7 Frequently Asked Questions and Troubleshooting

Frequently Asked Questions	Cause and Solution
Fail to turn on	<p>Press the power on key for over 1 second.</p> <p>Check if the battery is properly connected. Please remove and install it again, retry to turn on;</p> <p>Check if battery is properly charged</p>
Fail to connect network	<p>Weak signal. Please Try and move to a location with strong signal and try connecting to the network again;</p> <p>Please ensure that you are not beyond the network coverage of service providers;</p> <p>Please ensure you have a valid SIM card. Please contact your network provider for further information;</p>

Display information while turning on	<p>Check if the SIM card (insert the SIM card) is installed correctly</p> <p>Handset lock password. If the handset lock is activated, you have to input handset password before using.</p> <p>Input PIN. Inputting PIN while turning on each time is activated, you have to input the PIN code.</p> <p>Input PUK code: Having input wrong PIN code for 3 times straight will lock the SIM card. You need to input the PUK code provided by your network provider.</p>
Poor quality of calling	<p>Please check if the sound volume is tuned improperly</p> <p>In an area with poor receiving condition, example: basement, the signal might be weak. Try reaching a location with stronger signal reception and call again.</p> <p>While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.</p>
Standby duration	<p>The standby duration is relative to the system setting of network. While the mobile phone is in an area with poor signal strength and can not receive the signal, the</p>

shortened	handset will continuously search for a base station. This will significantly reduce battery charge. It is recommended that you turn off your mobile in area with no signal reception to save battery. Need replacing the battery. Please change a new battery.
SIM Card Error	Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card. The SIM card is not installed. The SIM card is damaged. Please contact your network service provider.
Fail to dial out	Please confirm if you press the dial key after dialing. Please confirm if calling is forbidden because of defaulting. Please confirm if the SIM is valid. Please confirm if the call barring is set. Please confirm if the fixed dial function is set.

Callers cannot contact you	<p>Please confirm if the mobile phone is on and connected with the network.</p> <p>Please confirm if calling is forbidden because of defaulting.</p> <p>Please confirm if the SIM card is valid.</p> <p>Please confirm if the call barring is set.</p>
Fail to charge	<p>Poor contact. Please check if the plug is connected well.</p> <p>Charge in the environment below 40°C or above 55°C. Please change your charging environment.</p> <p>The battery or charger is damaged. You need to replace it.</p>
Fail to set some functions	<p>Wrong operation;</p> <p>The network provider does not support the function, or you have not applied for it.</p>

Specific content of warranty